

LoD Offroad

Dodge 2500-3500 – Front Bumper Installation Instructions

Please read through the instructions before beginning any part of the installation process.


1) Remove the factory bumper from the truck. Also remove the wiring harness located in the bumper. You will need to install it into the new bumper.



2) With bumper removed begin by installing the frame mounts. Mount the frame mounts onto the frame using the $\frac{1}{2}$ "x3-1/2" bolts provided. Orient the mounts as shown in the picture above.



3) Position the mounts so that they are straight up and down or “plumb”. Once they are located properly be sure to tighten the bolts for them. Each side will have four bolts.

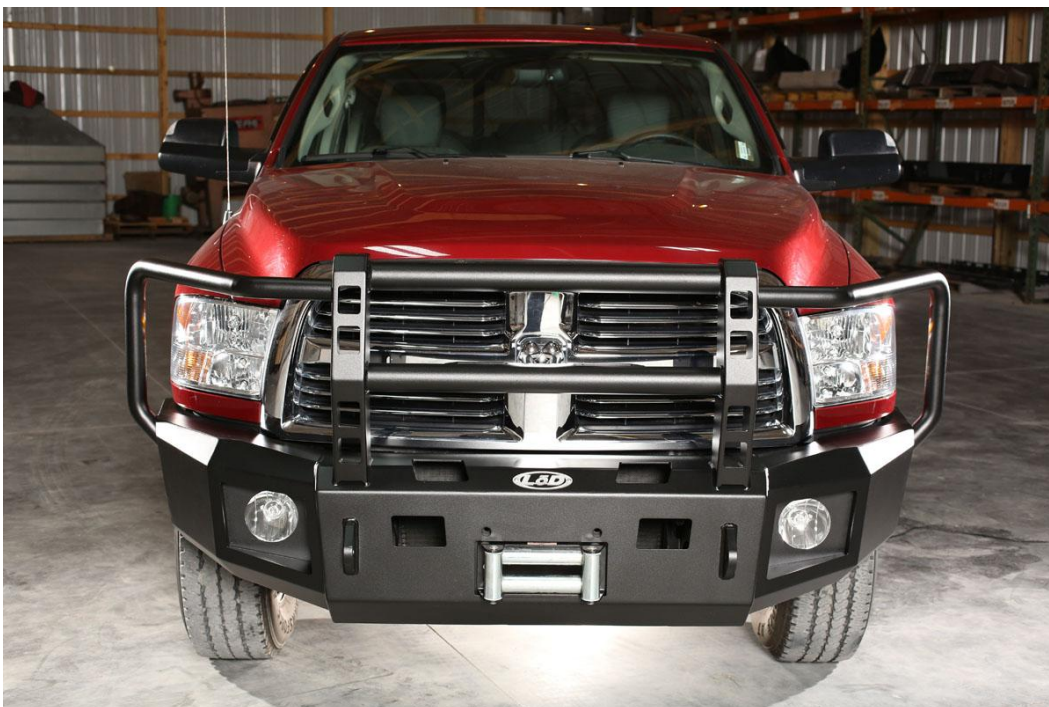

4) Using the six 5/8” bolts provided mount the bumper to the mounts from the previous step. The bumper is designed to be adjustable so be sure to align the bumper properly. Leave a gap everywhere around the bumper to allow the body to move separately from the frame without contacting the bumper.