


# LOD OFFROAD


## Optional Horizontal Roto-Pax Gas Can Mounts Installation Instructions

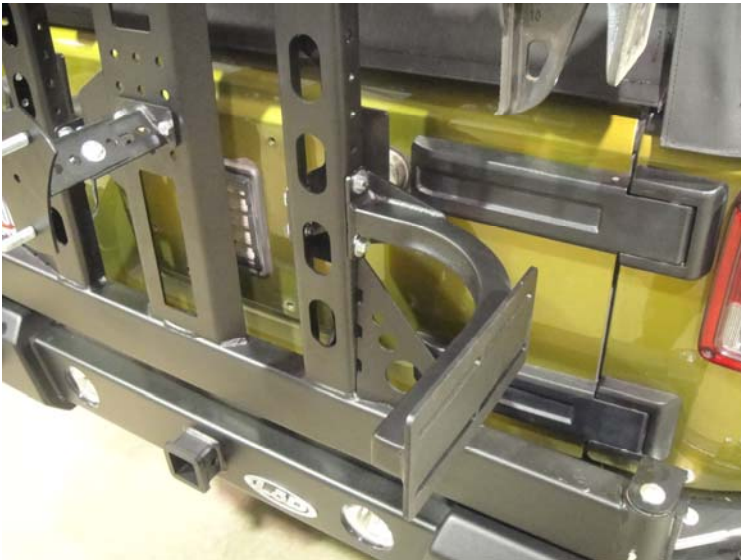

1. Place the arm up against the tire carrier. Bolt the arm to the carrier frame using two (2) 3/8" x 1" bolts per side. There are many height positions to choose from when mounting these. **Note:** The center of the main arm that comes around will be the center height of these gas cans.



3. Place the Roto-Pax mount against the arm. This mount is also adjustable forward and back. This allows the cans to be mounted as close to the body as possible.

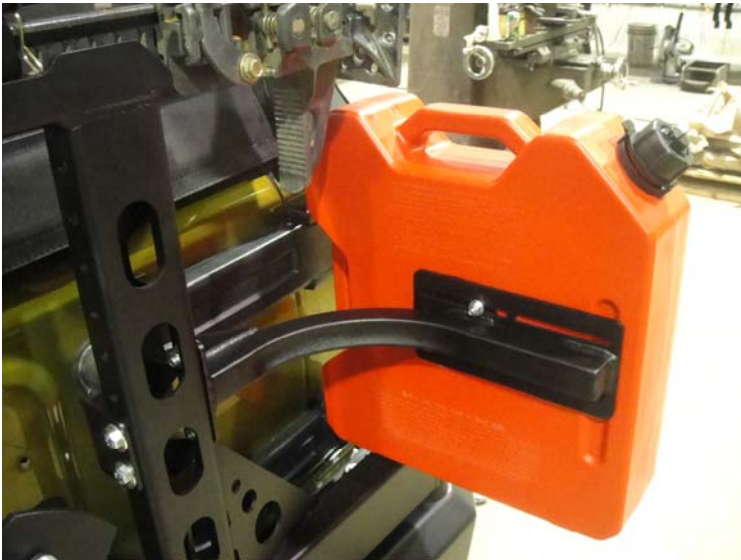

Note: This image shows the can mounted up close the body.



3. Repeat the first two steps for the other side. **Note:** If your tire carrier is our door-linked version then the driver side can mount will not bolt to it. Only the passenger side mount can be used with the door-linked version.

