


L&D OFFROAD

Optional Trail Rack

Installation Instructions

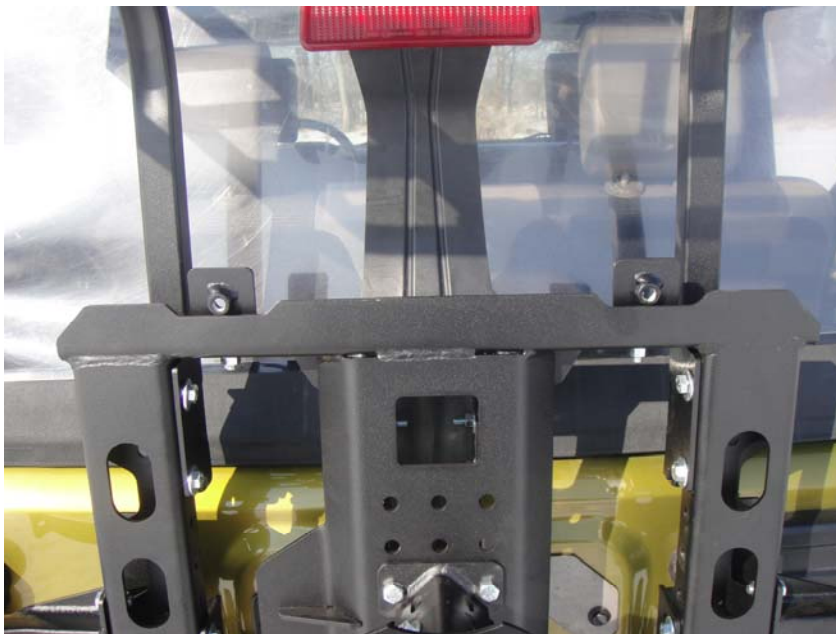

1. Begin with mounting the square tube arms to the carrier system. The arms must be bolted to the inside of the carrier uprights. The flat plates of these arms are the bottom side and are what needs to be bolted to the carrier. The height of these arms will set the height of the rack. Use the four (4) 3/8" x 1" bolts to mount these arms. Do not tighten these bolts until after bolting the rack to the arms.



2. Set the rack on top of these arms and place the four (4) 5/16" x 1" bolts down through the rack and tabs on the arms. Once all four bolts are in place (don't tighten these bolts yet), move the rack so that it sits level to the ground and tighten the arms where they mount to the tire carrier. Then go back and tighten the four bolts holding the rack to the arms.

