



LÖD OFFROAD

Optional Vertical Roto-Pax Gas Can Mounts Installation Instructions

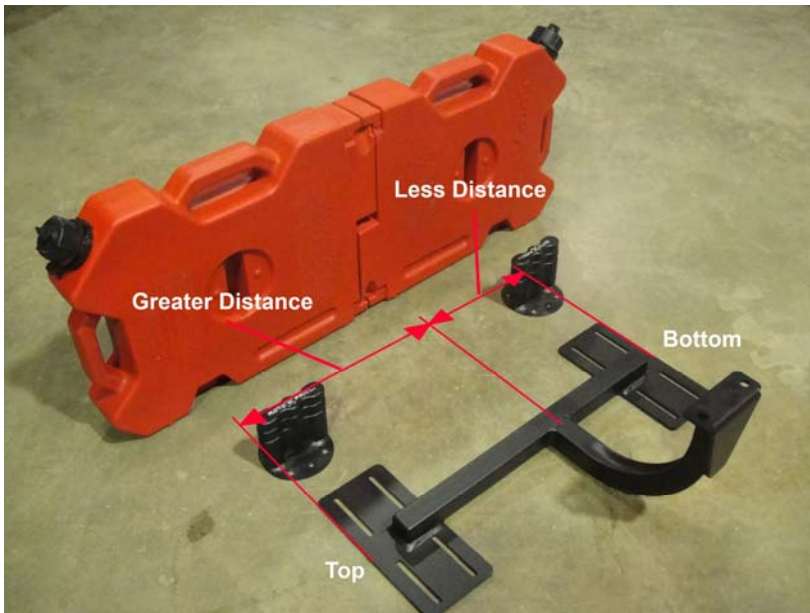

1. Begin by determining which mount is intended for which side. Only the driver side mount will work correctly for the driver side and the same goes for the Passenger side. The image above shows how to determine which mount is which. The distance the slotted plates are from the mounting arm determines this. The slotted plate which is closer to the mounting arm will be the bottom of the mount once the mount is turned to a vertical position. With that mount positioned down you will then know which side the mount is.

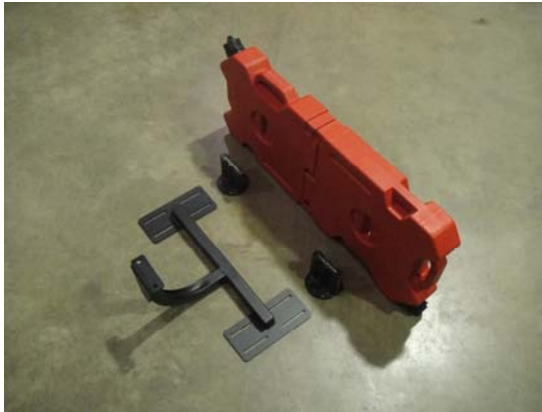

2. Place the arm up against the tire carrier. Bolt the arm to the carrier frame using two (2) 3/8" x 1" bolts per side. There are many height positions to choose from when mounting these. When determining the height to bolt these mounts, keep in mind, the center of the slotted plates are also to center of the gas cans



3. Place the Roto-Pax mount against the slotted plates. These mounts are also adjustable forward and back. This allows the cans to be mounted as close to the body as possible.



4. Repeat steps 2 and 3 for the other side mount.