





WEB LINK: http://lodoffroad.com/assets/pdfs/MFH2022 Accessory Front Hitch.pdf

VERIFY YOU HAVE ALL THE COMPONENTS BEFORE STARTING THE INSTALLATION. REFER TO THE ENGINEERING DRAWINGS AT THE END OF THIS DOCUMENT FOR A COMPLETE PARTS LIST

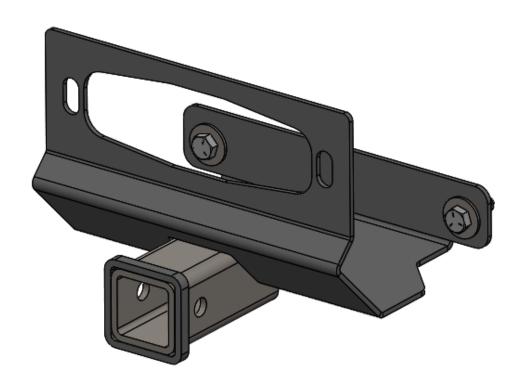

The Accessory Front Hitch is not rated to be used as a recovery point


To install the Accessory Front Hitch you must first install the Destroyer Front Bumper and Winch Plate. You will also need to remove the Lower Screen.

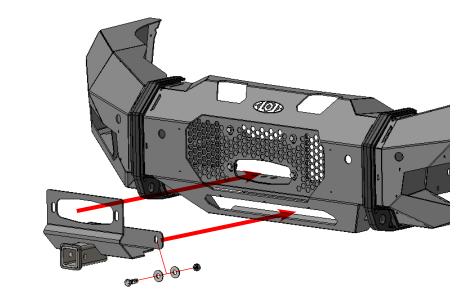

To Install the Front Accessory Hitch, the lower portion will fit thru the Lower Screen opening in the Front Bumper and butt up against the flange on the back of the Winch Plate.

Loosely install the provided Ø1/2" Bolts thru the back of the Hitch into the back of the Winch Plate.



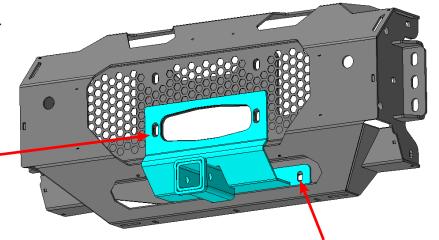


Flange at Back of Winch Plate

The Front of the Accessory Hitch will sandwich between the Winch Plate, Screen and the Fairlead for your Winch.

Loosely install your Fairlead, Hitch, and Winch Screen using the provided hardware with your Winch Plate.

Once everything is in position, securely tighten all the bolts.

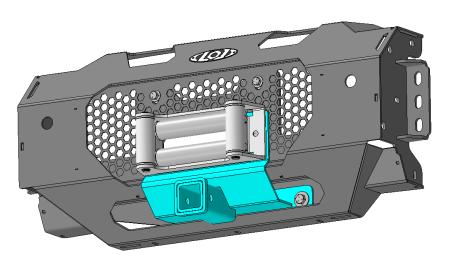

Maintenance


Periodically check and re-tighten all fasteners.

.

 Periodically check your product for scratches, dings, or rust spots which can happen over time or after heavy use. It is important to address these areas as soon as possible to prevent rust and corrosion from spreading. We recommend using Rustoleum[©] brand Black Semi-Gloss Protective Enamel (oil based). Apply using a foam brush by dabbing to match the powder coat texture.






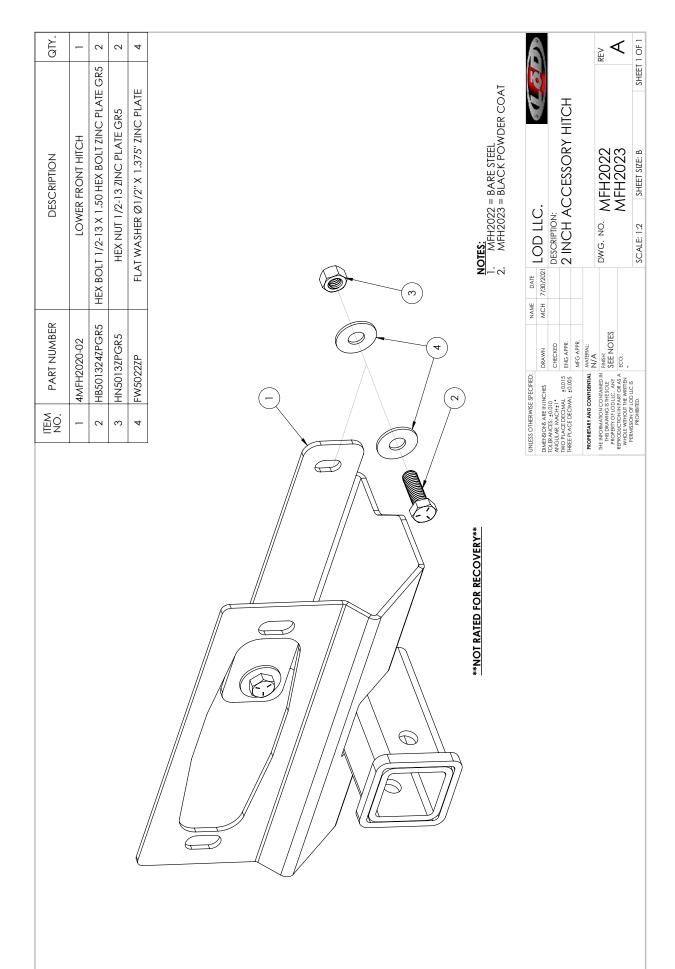





Packaged by:

On:

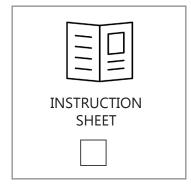

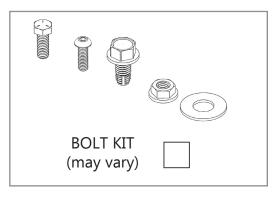


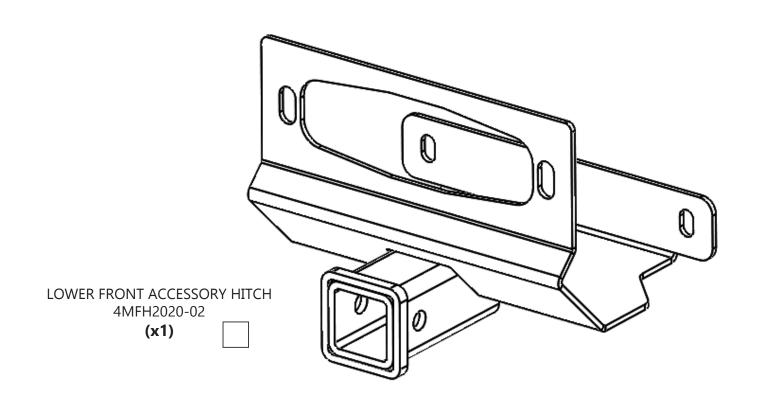




Packaged by:

On:

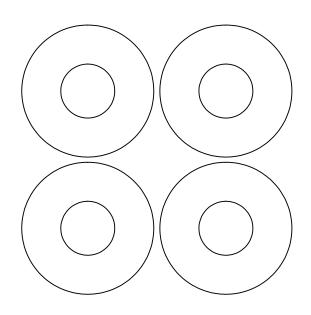

FLAT WASHER Ø1/2" X 1.375" (0159681)


(x2)

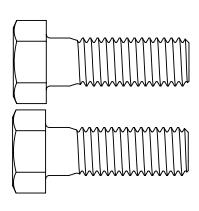

HEX BOLT 1/2-13 X 1.50" (0137545)

(x2)





HEX NUT 1/2-13 (0147968)

(x2)